



How to run AC synchronous color changing ?

1. Within the beam angle and effective distance of the IR remote controller, you can control multiple lamps, just press the button of IR controller to choose the mode and speed and press "save" to control multiple lamps. After power on, the synchronous color pattern will be re-called.
(Note: It's better to save your "mode" and "speed", you don't have to press the button for your favorite patterns again next time.)

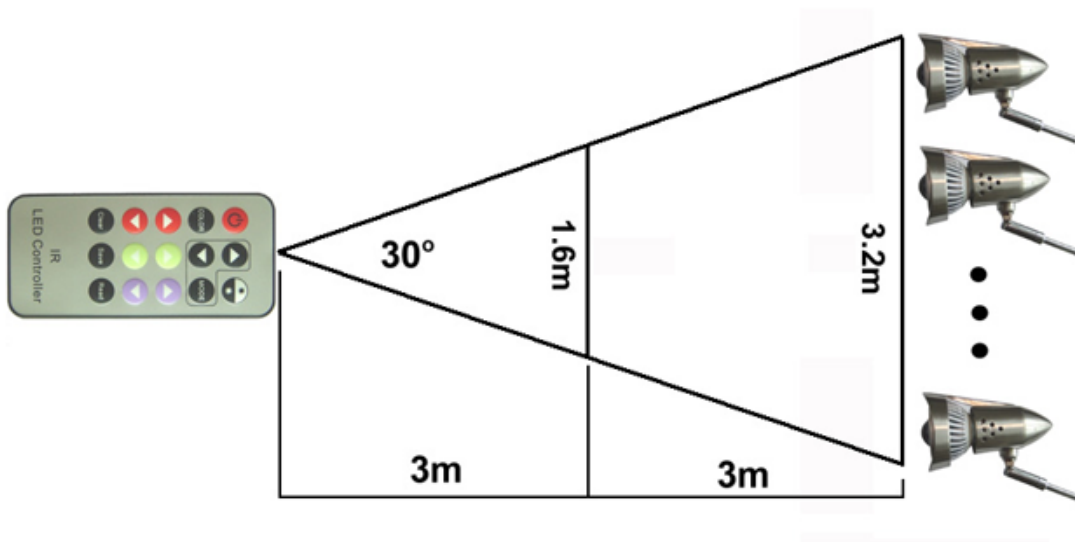

2. You can have the same results just to save the mode and speed with each single lamp

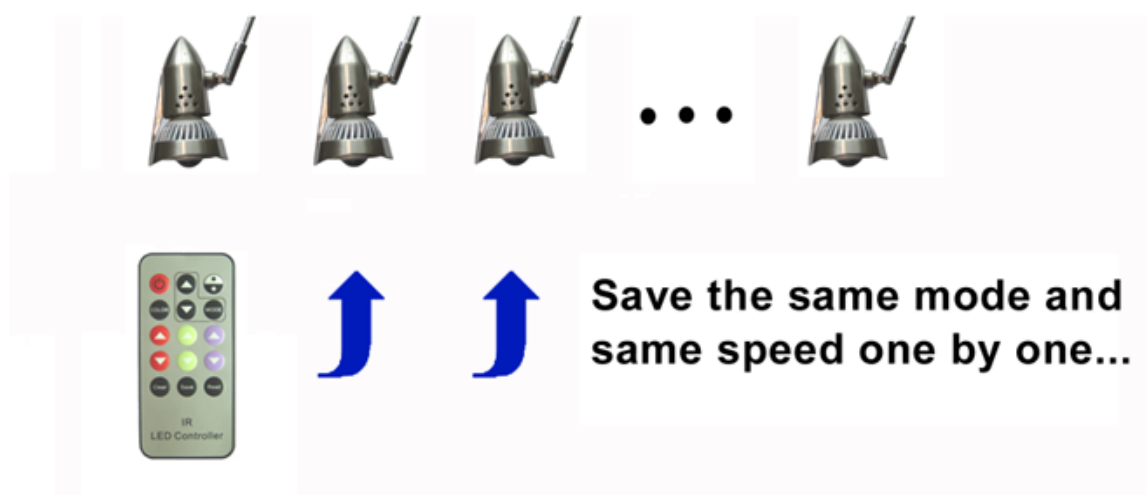

- ① **Note:** First scale of speed of "smooth flow" with pre-programed non-synchronous for the "Light fountain" effect , Rest of the speed does support the function of AC synchronous color changing